

# How to

# Paint

## Masonite interior moulded door designs

An added benefit of all Masonite moulded interior door designs is that they are factory-primed, ready for you to simply add a gloss or semi-gloss finish.



### Gloss finish

1. Before painting, make sure the doors are clean and dry. Any handling marks should be removed with a fine grade sandpaper and dusted off with a soft brush or rag.
2. Next, paint the edges of the door and touch-prime any areas where the surface primer may be damaged, with a good quality white acrylic primer/undercoat.
3. Apply a coat of good quality undercoat to the remainder of the door.
4. When this coat is fully dry, apply two coats of good quality gloss paint, sanding down between each coat.

### Semi-gloss finish

1. Again, before painting make sure the doors are clean and dry. Any handling marks should be removed with a fine grade sandpaper and dusted off with a soft brush or rag.
2. Paint the edges of the door and touch-prime any areas where the surface primer may be damaged using a good quality acrylic primer/undercoat.
3. When this primer/undercoat is dry, apply two coats of Dulux Satinwood paint or similar.

These recommendations are given in good faith. Masonite Europe has no control over production of any of the paints or stains and cannot guarantee the end result. Manufacturers' instructions given on cans should be followed.

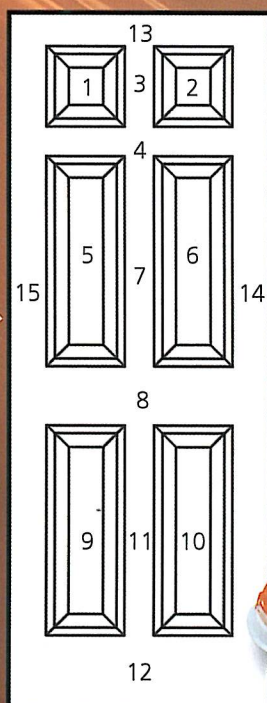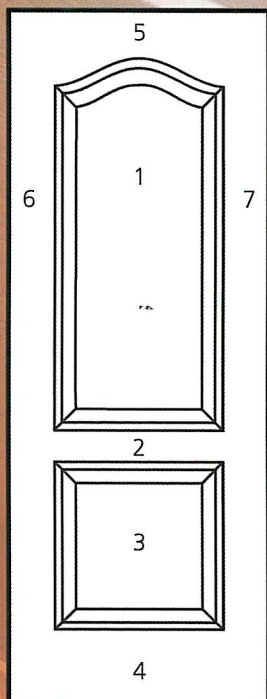

For best results, paint the panels in the order shown.



Masonite Europe, Jason House, Kerry Hill,  
Horsforth, Leeds LS18 4JR.  
Tel: 0113 2587 689 Fax: 0113 2590 015  
[www.masonite-europe.com](http://www.masonite-europe.com)