

PREMDOR[®]

SpeedRobe Sliding Wardrobe System

Product Guide



The smart way to
Create Storage.
Utilise Space.
Add Value.

SPEEDROBE
QUICK FIT, SLIDING WARDROBE SYSTEMS



“Sliding doors take up less space than

Sliding Wardrobe Doors

A unique range of sliding wardrobe doors that gives you the look you want to suit your budget. Kits can be used with a vast array of 35mm doors, which means that whether you are looking to create a contemporary bedroom design or maybe, a more traditional feel, our range is available in styles and finishes to suit every taste. Best of all, you'll find that it is surprisingly more affordable than you might think.

Ordering is as simple as 1,2,3.

1. Measure the size of the system you need.
2. Order your SpeedRobe kit.
3. Choose and order your choice of doors from the Premdor range.



SpeedRobe sliding wardrobe systems are a stylish and flexible way of giving your room an extra special feel. Offering fantastic value for money, they can transform unused space, add storage and offer a focal point to your living space.

hinged doors, giving you more room"


- Kit contains everything except the doors.
- Kit made from primed foil wrapped MDF that can easily be painted to match the architrave and skirting in the room.
- Can be used with any design of 35mm x 1981mm Premdor interior door.
- Doors sold separately, choose from the Premdor range.
- Kit can be used to span openings from 2286mm wide to 1240mm wide.
- Choose from Contemporary or Torus architrave.
- All fixings are hidden.
- Simple rapid installation with minimum tools.

**Buy With
Confidence**



Technical, Fitting and Ordering Details

SpeedRobe is a quick-fit sliding wardrobe system. Follow the steps below to create your desired storage unit.

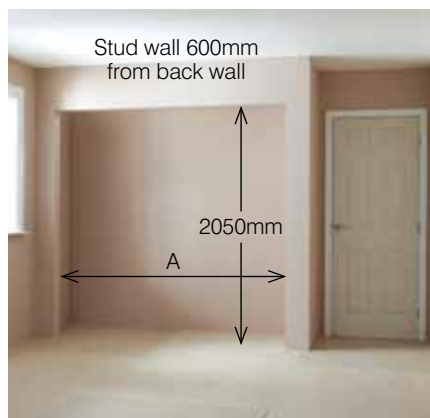

1 Create your space – Make a stud wall 74mm to 105mm thick, 600mm from the back wall with a hole to fit the SpeedRobe. Hole in stud wall must always be 2050mm high.

Then choose a hole width from the table below.

2 The kit – All SpeedRobe kits come in component format. Please note, doors are not supplied with SpeedRobe kits. Any 35mm Premdor door of any size shown in the table below can be used with the SpeedRobe kit (excludes the Wessex Oak range). The kit is made from white primed foil wrapped MDF, which must be painted after installation with a basecoat and topcoat paint system.

3 Install – Now you have your sliding wardrobe kit, all you have to do is install it!

All kits come with comprehensive fitting instructions included.

For further information with regards to installation, please contact us.

A SpeedRobe Installation Guide is also available. Contact Premdor to request your copy.

Order Now!

Door and Hole Width Table

Door Width mm	No. of doors	Hole Width A mm	Hole Height mm
762	3	2286	2050
711	3	2133	2050
686	3	2058	2050
610	3	1830	2050
864	2	1748	2050
838	2	1696	2050
762	2	1544	2050
711	2	1442	2050
686	2	1392	2050
610	2	1240	2050



Contemporary



Torus

Code	Description	Price
61800	2400 Wardrobe kit with Contemporary architrave (excluding doors)	£180.00
61801	2400 Wardrobe kit with Torus architrave (excluding doors)	£180.00

PREMDOR®

For installation support or further information

tel: 0844 209 0008

fax: 0844 371 5333

www.premdor.co.uk